

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" batteries (included).

Adult assembly is required.

Tool required for assembly:  
Phillips screwdriver  
(not included).



## Parts



Seat Bottom



Seat Back



Table Base



Table Top



Armrest



4 Legs



3 mm x 18 mm Screw - 2

Shown Actual Size

Note: Tighten or loosen all screws with a Phillips screwdriver.  
Do not over-tighten the screws.

## Consumer Information

**Great Britain:** Vanwall Business Park, Maidenhead SL6 4UB.  
Helpline: 01628 500303. [www.service.mattel.com/uk](http://www.service.mattel.com/uk).

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**Asia:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

**Malaysia:** Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.

## Care


- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

# Assembly


## ⚠ CAUTION

This product contains small parts.  
For assembly by an adult. Take extra care  
during unpacking and assembly.


- 1** **IMPORTANT!** You must assemble the armrest to the seat bottom (step 1) BEFORE assembling the seat back (step 2).

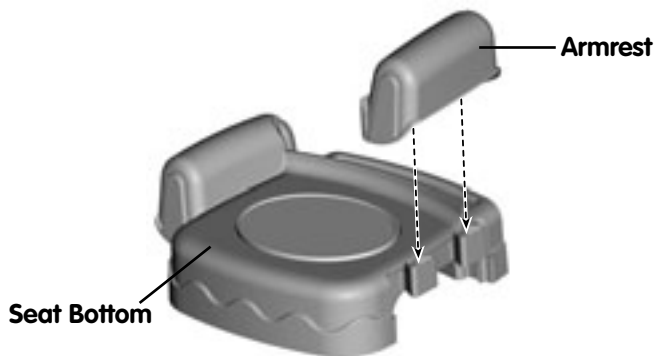

- "Snap" the armrest onto the seat bottom.

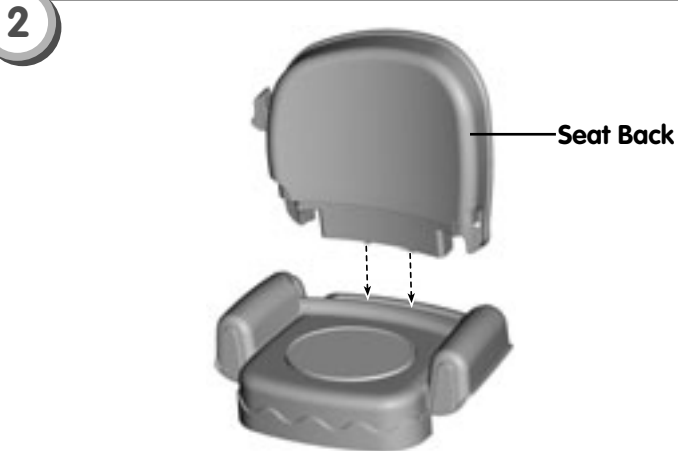

- "Snap" the seat back into the seat bottom.

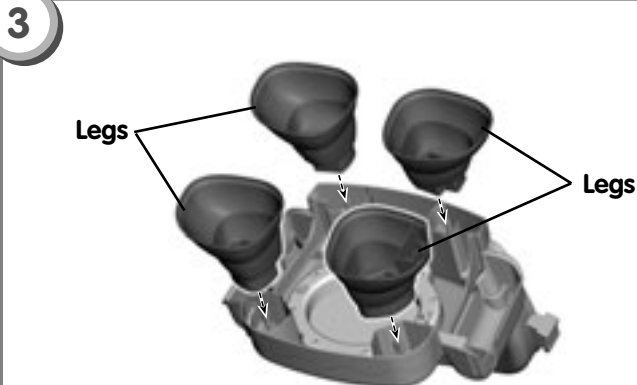


- "Snap" the four legs into the underside of the seat bottom.

**Note:** Each leg fits in only one location.

**4**

**IMPORTANT!** You must assemble the table base to the chair assembly (step 4 and 5) BEFORE assembling the table top.

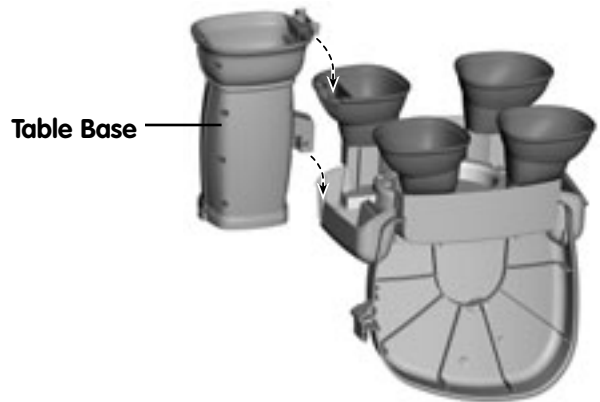


- Fit the table base onto the chair assembly, as shown.

**5**



- Insert two screws through the table base and into the leg. Tighten the screws.



**6**

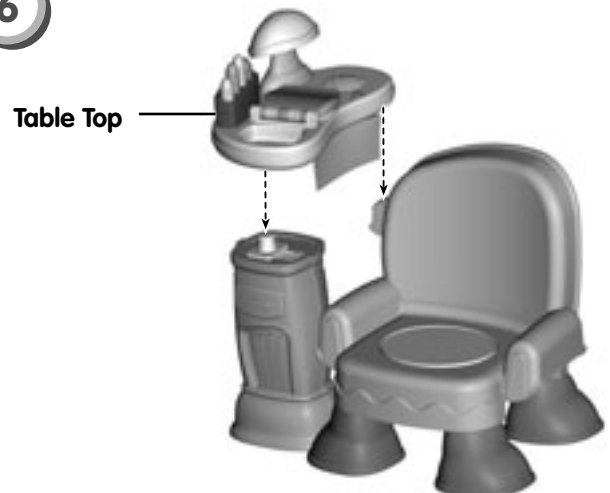

- Turn the assembly upright.
- Press down firmly to "snap" the table top onto the table base.

**Note:** This may require some force.

## Battery Replacement

 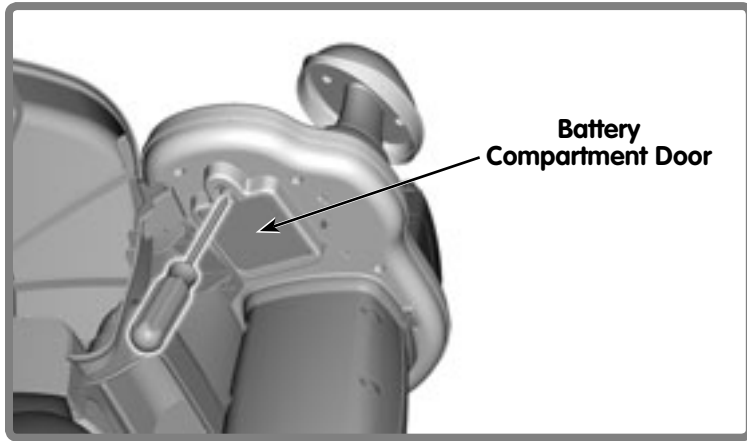

**For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "AA" (LR6) batteries.**

- Locate the battery compartment on the underside of the table top.
- Loosen the screw in the battery compartment door. Remove the battery compartment door. Remove the batteries and throw them away.
- Insert three "AA" (LR6) alkaline batteries, as indicated inside the battery compartment.

**Hint:** We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw.
  - When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries!
- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).




## Battery Safety Information


In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## Three Fun Play Modes!

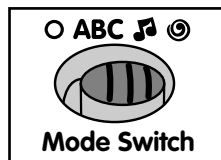

- Slide the mode switch to either learning mode **ABC**, music mode or imagination .
- When your child is finished playing with this toy, slide the mode switch off .

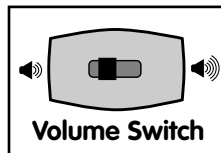

- Adjust the volume to high or low , for your child's comfort.

## ABC Learning Mode

- Turn the book pages to hear the story.
- Press on the crayons or lamp to learn about colours, letters, shapes and counting. Press again to hear a song or fun phrase.
- Sit on the seat to hear fun phrases or a fun tune. Stand up and the music stops. Sit down to resume.

## Music Mode

- Turn the book pages to hear a tune.
- Press on the crayons or lamp for more music.
- Sit on the seat for fun phrases and music.

## Imagination

- Turn the pages to hear sound effects from the book.
- Press on the crayons to hear tones.
- Press on the lamp to hear a musical ditty or hear lamp "on/off" sound effects.
- Sit on the seat or stand up for sound effects.